

NFV&MEC Plugtests 2020

NFV Interoperability Results per Test Case

	Interoperability		Not Executed	Totals	
	OK	NO	NA	Run	Results
TD_NFV_NS_NSLCM_INSTANTIATE_001	44	1	0	45	45
TD_NFV_NS_NSLCM_SCALE_OUT_001	22	0	20	22	42
TD_NFV_NS_NSLCM_SCALE_OUT_002	4	0	8	4	12
TD_NFV_NS_NSLCM_SCALE_OUT_003	3	0	20	3	23
TD_NFV_NS_NSLCM_SCALE_OUT_004	4	0	8	4	12
TD_NFV_NS_NSLCM_SCALE_IN_001	22	0	20	22	42
TD_NFV_NS_NSLCM_SCALE_IN_002	4	0	8	4	12
TD_NFV_NS_NSLCM_SCALE_IN_003	7	0	39	7	46
TD_NFV_NS_NSLCM_SCALE_IN_004	4	0	8	4	12
TD_NFV_NS_NSLCM_SCALE_OUT_VNF_001	11	0	17	11	28
TD_NFV_NS_NSLCM_SCALE_OUT_VNF_002	1	0	9	1	10
TD_NFV_NS_NSLCM_SCALE_OUT_VNF_003	4	0	19	4	23
TD_NFV_NS_NSLCM_SCALE_OUT_VNF_004	1	0	9	1	10
TD_NFV_NS_NSLCM_SCALE_IN_VNF_001	11	0	17	11	28
TD_NFV_NS_NSLCM_SCALE_IN_VNF_002	1	0	9	1	10
TD_NFV_NS_NSLCM_SCALE_IN_VNF_004	1	0	9	1	10
TD_NFV_NS_NSLCM_SCALE_TO_LEVEL_001	14	0	13	14	27
TD_NFV_NS_NSLCM_SCALE_TO_LEVEL_VNF_001	4	0	10	4	14
TD_NFV_NS_NSLCM_SCALE_TO_LEVEL_VNF_003	1	0	11	1	12
TD_NFV_NS_NSLCM_TERMINATE_001	45	0	0	45	45
TD_NFV_NS_NSLCM_TERMINATE_SFC_001	1	0	1	1	2
TD_NFV_NS_NSLCM_UPDATE_START_001	14	0	4	14	18
TD_NFV_NS_NSLCM_UPDATE_STOP_001	14	0	4	14	18
TD_NFV_NS_NSLCM_UPDATE_VNF_DF_001	2	3	13	5	18
TD_NFV_NS_NSLCM_UPDATE_VNF_CONFIG_001	1	3	14	4	18
TD_NFV_NS_PM_NS_MONITORING_JOB_CREATE_001	11	0	11	11	22
TD_NFV_NS_PM_NS_PERFORMANCE_METRICS_QUERY_001	11	0	11	11	22
TD_NFV_NS_PM_NS_THRESHOLD_CREATE_001	8	0	14	8	22
TD_NFV_NS_PM_NS_MONITORING_JOB_DELETE_001	2	1	19	3	22
TD_NFV_NS_PM_NS_THRESHOLD_DELETE_001	1	1	20	2	22

TD_NFV_NS_VNFPM_ONBOARD_001	45	0	0	45	45
TD_NFV_NS_VNFPM_DELETE_001	41	2	2	43	45
TD_NFV_NS_ONBOARD_NSD_001	44	0	0	44	44
TD_NFV_NS_DELETE_NSD_001	45	0	0	45	45
TD_NFV_S-VNFM_NSLCM_INSTANTIATE_001	16	0	0	16	16
TD_NFV_S-VNFM_NSLCM_SCALE_OUT_001	0	1	13	1	14
TD_NFV_S-VNFM_NSLCM_SCALE_OUT_002	0	1	4	1	5
TD_NFV_S-VNFM_NSLCM_SCALE_OUT_003	0	1	7	1	8
TD_NFV_S-VNFM_NSLCM_SCALE_OUT_004	0	1	4	1	5
TD_NFV_S-VNFM_NSLCM_SCALE_IN_001	0	1	13	1	14
TD_NFV_S-VNFM_NSLCM_SCALE_IN_002	0	1	4	1	5
TD_NFV_S-VNFM_NSLCM_SCALE_IN_003	0	1	7	1	8
TD_NFV_S-VNFM_NSLCM_SCALE_IN_004	0	1	4	1	5
TD_NFV_S-VNFM_NSLCM_SCALE_OUT_VNF_001	4	1	9	5	14
TD_NFV_S-VNFM_NSLCM_SCALE_OUT_VNF_003	0	1	7	1	8
TD_NFV_S-VNFM_NSLCM_SCALE_IN_VNF_001	4	1	9	5	14
TD_NFV_S-VNFM_NSLCM_SCALE_IN_VNF_003	0	1	7	1	8
TD_NFV_S-VNFM_NSLCM_SCALE_IN_VNF_004	0	0	1	0	1
TD_NFV_S-VNFM_NSLCM_SCALE_TO_LEVEL_001	0	0	2	0	2
TD_NFV_S-VNFM_NSLCM_SCALE_TO_LEVEL_VNF_001	0	1	1	1	2
TD_NFV_S-VNFM_NSLCM_TERMINATE_001	16	0	1	16	17
TD_NFV_S-VNFM_NSLCM_UPDATE_START_001	1	2	7	3	10
TD_NFV_S-VNFM_NSLCM_UPDATE_STOP_001	1	2	7	3	10
TD_NFV_S-VNFM_NSLCM_UPDATE_VNF_DF_001	0	2	8	2	10
TD_NFV_S-VNFM_NSLCM_UPDATE_VNF_CONFIG_001	1	0	9	1	10
TD_NFV_S-VNFM_FM_NS_ALARM_SUBSCRIPTION_CREATE_001	2	0	0	2	2
TD_NFV_S-VNFM_FM_NS_ALARM_SUBSCRIPTION_DELETE_001	2	0	0	2	2
TD_NFV_S-VNFM_FM_NS_ALARM_NOTIFICATION_001	2	0	0	2	2
TD_NFV_S-VNFM_FM_NS_ALARM_CLEAR_NOTIFICATION_001	2	0	0	2	2
TD_NFV_S-VNFM_FM_NS_ALARM_QUERY_001	0	2	0	2	2
TD_NFV_S-VNFM_VNFPM_ONBOARD_001	17	0	0	17	17
TD_NFV_S-VNFM_VNFPM_DELETE_001	16	0	1	16	17
TD_NFV_S-VNFM_ONBOARD_NSD_001	14	0	3	14	17
TD_NFV_S-VNFM_DELETE_NSD_001	13	0	4	13	17
TD_NFV_MULTISITE_NSLCM_INSTANTIATE_MULTISITE_001	2	0	0	2	2
TD_NFV_MULTISITE_NSLCM_TERMINATE_MULTISITE_001	2	0	0	2	2

TD_NFV_MULTISITE_VNFPM_ONBOARD_001	2	0	0	2	2
TD_NFV_MULTISITE_VNFPM_DELETE_001	2	0	0	2	2
TD_NFV_MULTISITE_ONBOARD_NSD_001	2	0	0	2	2
TD_NFV_MULTISITE_DELETE_NSD_001	2	0	0	2	2
TD_NFV_NS-OSS-BSS_NSLCM_INSTANTIATE_001	2	0	0	2	2
TD_NFV_NS-OSS-BSS_NSLCM_TERMINATE_001	2	0	0	2	2
TD_NFV_NS-OSS-BSS_VNFPM_ONBOARD_001	2	0	0	2	2
TD_NFV_NS-OSS-BSS_VNFPM_DELETE_001	2	0	0	2	2
TD_NFV_NS-OSS-BSS_ONBOARD_NSD_001	2	0	0	2	2
TD_NFV_NS-OSS-BSS_DELETE_NSD_001	2	0	0	2	2
TD_NFV_AUTO-IOP_NSLCM_INSTANTIATE_001	5	1	0	6	6
TD_NFV_AUTO-IOP_NSLCM_SCALE_OUT_VNF_001	4	1	1	5	6
TD_NFV_AUTO-IOP_NSLCM_SCALE_IN_VNF_001	1	1	4	2	6
TD_NFV_AUTO-IOP_NSLCM_TERMINATE_001	6	1	0	7	7
TD_NFV_AUTO-IOP_PM_NS_MONITORING_JOB_CREATE_001	0	1	4	1	5
TD_NFV_AUTO-IOP_PM_NS_PERFORMANCE_METRICS_QUERY_001	0	1	4	1	5
TD_NFV_AUTO-IOP_VNFPM_ONBOARD_001	5	1	0	6	6
TD_NFV_AUTO-IOP_VNFPM_DELETE_001	4	2	0	6	6
TD_NFV_AUTO-IOP_ONBOARD_NSD_001	6	1	0	7	7
TD_NFV_AUTO-IOP_DELETE_NSD_001	5	1	0	6	6
TD_NFV_AUTO-IOP_S-VNFM_NSLCM_INSTANTIATE_001	0	1	0	1	1
TD_NFV_AUTO-IOP_S-VNFM_NSLCM_TERMINATE_001	1	0	0	1	1
TD_NFV_AUTO-IOP_S-VNFM_VNFPM_DELETE_001	1	0	0	1	1
TD_NFV_AUTO-IOP_S-VNFM_DELETE_NSD_001	1	0	0	1	1
TD_NFV_NS-CNF_NSLCM_INSTANTIATE_001	9	3	0	12	12
TD_NFV_NS-CNF_NSLCM_SCALE_OUT_001	1	0	8	1	9
TD_NFV_NS-CNF_NSLCM_SCALE_IN_001	1	0	8	1	9
TD_NFV_NS-CNF_NSLCM_SCALE_TO_LEVEL_VNF_001	1	0	5	1	6
TD_NFV_NS-CNF_NSLCM_TERMINATE_001	10	0	1	10	11
TD_NFV_NS-CNF_NSLCM_UPDATE_START_001	4	0	0	4	4
TD_NFV_NS-CNF_NSLCM_UPDATE_STOP_001	4	0	0	4	4
TD_NFV_NS-CNF_NSLCM_UPDATE_VNF_CONFIG_001	2	0	2	2	4
TD_NFV_NS-CNF_VNFPM_ONBOARD_001	12	0	0	12	12
TD_NFV_NS-CNF_VNFPM_DELETE_001	8	0	3	8	11
TD_NFV_NS-CNF_ONBOARD_NSD_001	9	2	0	11	11
TD_NFV_NS-CNF_DELETE_NSD_001	8	0	3	8	11

TD_NFV_MULTI_S-VNFM_NSLCM_INSTANTIATE_001	2	0	0	2	2
TD_NFV_MULTI_S-VNFM_NSLCM_SCALE_OUT_VNF_001	1	0	1	1	2
TD_NFV_MULTI_S-VNFM_NSLCM_SCALE_IN_VNF_001	1	0	1	1	2
TD_NFV_MULTI_S-VNFM_NSLCM_TERMINATE_001	1	0	1	1	2
TD_NFV_MULTI_S-VNFM_VNFPM_ONBOARD_001	2	0	0	2	2
TD_NFV_MULTI_S-VNFM_VNFPM_DELETE_001	1	0	1	1	2
TD_NFV_MULTI_S-VNFM_ONBOARD_NSD_001	2	0	0	2	2
TD_NFV_MULTI_S-VNFM_DELETE_NSD_001	1	0	1	1	2